



ROUGH HOUSE 4 & 6 PITCHING INSTRUCTIONS



Rough House 4 Pictured

In order to familiarize yourself with your new tent, we recommend you “test pitch” it before your first camping trip. For technical support please visit www.slumberjack.com.

 
Package Includes: Carry bags, tent body, rain fly, two main poles, two ridge poles, multiple guylines and tent stakes.

1



On an even piece of ground, lay out the main tent body and stake down the four corners. Completely assemble each pole section and make sure they are properly connected before moving to step 2. *Improper assembly of each pole sections can result in structural failure that is not covered under warranty.

2

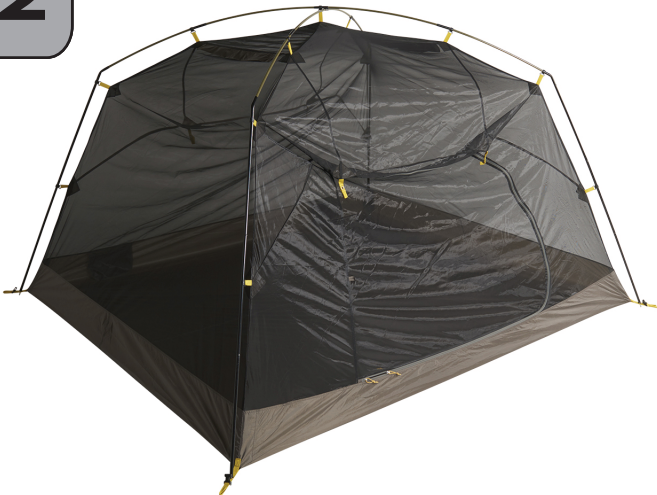

Insert pole tips into the metal eyelets at back corners. Flex pole to stand up and insert pole tips into metal eyelets at front corners. Be sure to lift both main tent body as well as main poles for an easier pitch.



Eyelet connectors used for main poles, ridge poles & rain fly.



Ridge pole should be placed over main poles



Rain fly pole connectors located under rain fly guy out points.



Rain fly attachment.

3



Work your way around the tent to attach all clips to the proper poles. Slide ridge poles through pole sleeves above door. Ensure the ridge poles are placed over the main poles and then connect the pole ends to the yellow webbing with metal eyes at the top/side of the tent.

4



Lay tent fly over tent - door to door. Using the “Ridge pole & rain fly eyelet attachment” connect the fly to ridge poles (behind main ridge pole eyelets). Attach hook/loop rain fly connections on underside of fly to poles (x4). Connect rain fly to each stake out corner with side release buckles. Stake out vestibule, doors and all guy out points for the most stable pitch.